<u>Instructions for operating the Iron Mike Pitching</u> Machine

- 1. The number one thing you must always be thinking about is Safety Safety Safety. The pitching arm is unforgiving.
- 2. <u>Never</u> open the cage door on the machine by the pitching arm while the power is on.

Operating the Iron Mike:

- 1. Put all the softballs in the hopper.
- 2. Move the screen around in front of the Iron Mike for protection for the machine.
- 3. On the back of the machine there is a gray box, that's the power switch.
- 4. Turn the power on.
- 5. On the back of the machine there is a blue box 4" x 8" x 12" that houses the on off switches, they are push buttons.

6. Once you start the Iron Mike it is set to pitch 12 balls before a restart.